

A9 SERIES -008 USE MANUAL

UPPER LIMBS



CONTENT

IMPORTANT DECLARATION.....	1
WARNING.....	2
USE INSTRUCTION.....	3
REGULAR MAINTENANCE.....	4
CABLE ROUTING DIAGRAM.....	5
EXPLODED PICTURE.....	6
ASSMBLE STEP.....	7

IMPORTANT DECLARATION:

First we are highly appreciated that you buy **A9-008 UPPER LIMBS**.

For your health and safe, before you exercise please consult from your doctor and define a appreciated exercise burden for yourself. Before using this equipment read carefully all related instructions and notice. In this way you gain more happiness during exercise. When you begin to use **A9-008 UPPER LIMBS**, our company think you have read use manual already.

After you buy this equipment, please fill carefully ‘post-sale service warranty card’ and keep it, meanwhile, post return receipt (stub) back to our company so that we provide better service for you.

This manual is the first edition 2010 of series products **A9-008 UPPER LIMBS** The content of manual will change along with promotion of products, and we will not inform you.

All notice and instruction are in order to keep yoafe and use this equipment correctly. If not obeying the suggestion, take the consequence yourself.

After reading, the user must keep this manual in the place you can see it at anytime.

PRODUCTS INTRODUCTION:

- 1 The main frame adopts the high-quality steel tube of for use, durable and safe.
- 2 Adopt high strength steel cable as transmitting wire and you will feel safe and durable.
- 3 The weight stack adopts casting iron and has protective cover.
- 4 Rotating part adopts the high-quality bearing, durable in use and there is no noise while using.
- 5 The high quality leader makes it smoother while using.

WARNING

1. This training equipment is only intended for use in training areas of organizations such as sport associations, educational establishments, hotels, clubs and studios, where access and control is specifically regulated by the owner (person who has the legal responsibility).
2. The training equipment shall only be used in areas where access control is specifically regulated by the owner; the extent of control depends on the users, e.g. degree of reliability, age, experience, etc.
3. The training equipment shall only be used in supervised areas.
4. Always keep unsupervised children and disabled away from the equipment.
5. Injury to health may result from incorrect or excessive training, please consult the coach to choose correct exercise method and proper burden.
6. Please adjust the load and equipment further (e.g. seat adjustment) before using.
7. Please check if the bolt and handrail are out of work before you start to use it.
8. When weight stacks, booms and other parts of this equipment are blocked, must handle with other people's assistance, in case that the weight stacks may suddenly drop and cause accident.
9. Adjust the length of the steel cable properly and never make the steel wire rope twist. After using the machine for a period, the owner shall check the steel cable to make sure no unusual phenomena in connecting. When meet any problems, please consult the professional maintenance personnel at once.
10. Do not suddenly drop the weight stack. In order to avoid destroying other weight stacks, please raise it when the weight stacks nearly collide.
11. While using, forbid hands stretching into the weight stacks or the relative motion parts, so as not to injure the finger.
12. Never allow person with heart disease and children under 12 to use this equipment.
13. The training equipment is in compliance with EN 957-2 class S (S=studio);
14. The max training weight is 150kgs (330pound). The max user's body weight is 150kg (330pound).
15. The machine should be located stably. A space of 2000mm*2000mm should be around the machine.
16. The scope of products: Primary use in professional fitness club. The second is the residence community, gym of some company
17. If you feel swirl, surfeit and other discomfort sense, Please stop exercising and go for doctor.
18. The equipment should be installed on stable even surface.
19. The machine shall only be used indoor and be avoid of moisture.
20. Wear right shoes and coat
21. Warm up before exercising
22. Don't use the equipment to do the impossible function
23. Please exercise under instruction by professional coach.
24. Inspect if the equipment is fastness before using

25. Any of the adjustment devices that could interfere with the user movement should not be left projecting.

USE INSTRUCTION:



A9-008 UPPER LIMBS

Exercise position: Triceps, Deltoids, Pectoralis Maior, Serratus Anterior, Lats

Dimension: 1080mm (L)*110mm(W)*2380 mm(H) weight :285kg

Use Instruction:

- 1 Read all caution Warning Labels before using this equipment.
- 2 Adjust seat pad and sit with your back firmly against back pad.
- 3 Insert pin into weight stack at desired resistance level.
- 4 Hold the lever firmly, securely position both hands in an overhand grip or with palms facing each other.
- 5 Keeping your arms close to your sides, slowly push forward while maintaining a smooth, comfortable exercise movement.
- 6 Pause for a moment, then slowly return to the start position and repeat the movement.

NOTICE:

1. Warm-up.....It needs warm-up for 5-10 minutes before starting exercise, for instance mark time, free-standing exercises etc., in order to move each joint muscle, so as not to injure the joint muscle while exercising.
- 2 DietEat some more protein, vegetables, and fruit. Begin to do exercises until 40 minutes after a meal. Taking food until half an hour after doing exercises and drink little water while doing exercise.
3. Breath.....Breathe in while exerting oneself, exhale while relaxing. To coordinate breathe with movement.
- 4 Frequency...It needs to take a rest over 48 hours before exercising the same muscle.
- 5 Burden.....Exerciser should choose suitable weight according to one's own actual conditions, make sure not to be overweight, so as not to cause the muscle to draw wounded. Exercises should according to the

progressive principle; it is normal to feel ache while exercise for the first time.

REGULAR MAINTENANCE

- 1 . The safety level of the equipment can be maintained only if it is examined regularly for damage and wear, e.g. ropes, pulleys, connection points;
- 2 . Pay special attention to components most susceptible to wear.
- 3 . Replace defective components immediately and /or keep t he equipment out of use until repair;
- 4 . This equipment should carry on regular maintenance according to the following chart:

MAINTENANCE	EVERYDAY	EVERY WEEK	THREE MONTHS
Check: connecting, bolt, Weight stack bolt	√		
Clearance: cushion and cover	√		
Lubrication: place of sliding			√
Check: bolt if tighten		√	
Lubrication: Bracket of bearing			√

INSTALL SKETCH MAP

Let assembly become easier

All the content of user's manual is to assured the strength training machine can be installed more easily


Reading the details and instructions before installing:

- 1 . Because the size and weight of equipment is so large, Please choose the installed place near the desired station and assured there is enough space to exercise
- 2 . All parts can be put on the clear area, then backout the wrapper. And the wrapper can't be through away before installation finished.
- 3 . Screw the bolt tightly except the additional instruction
- 4 . All parts must be installed according the illustration indication.


5 . Installation work can be finished by tow men

6 . Identify all parts by part identify chart

CABLE ROUTING DIAGRAM :

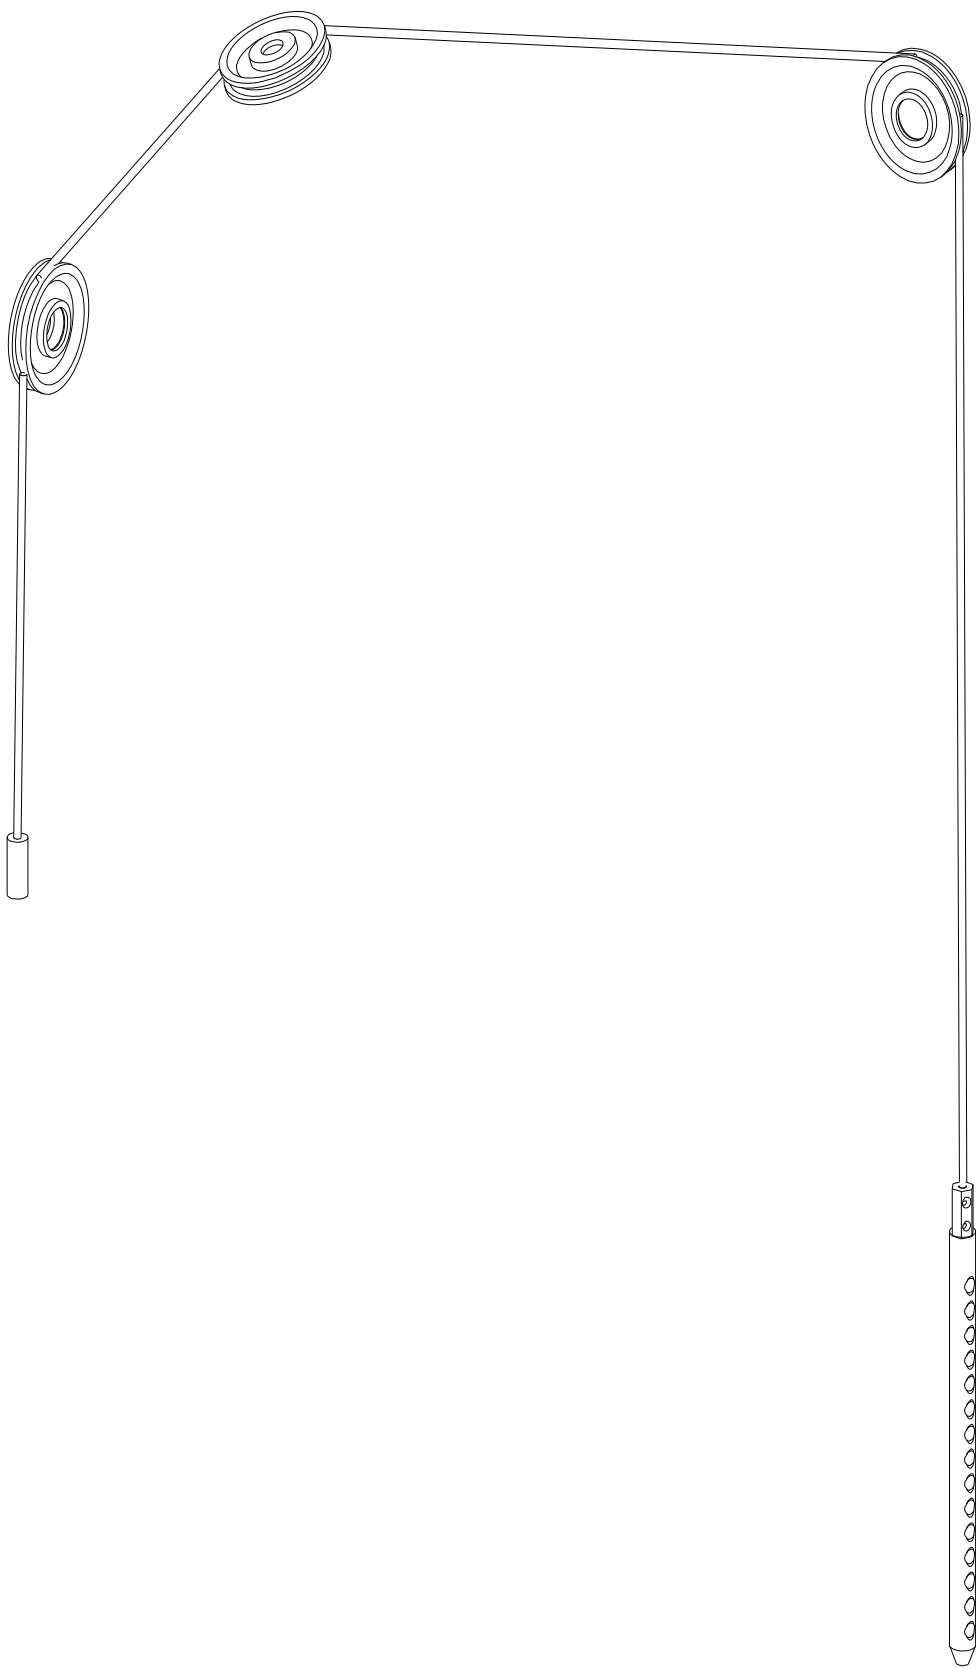

Exploded Picture

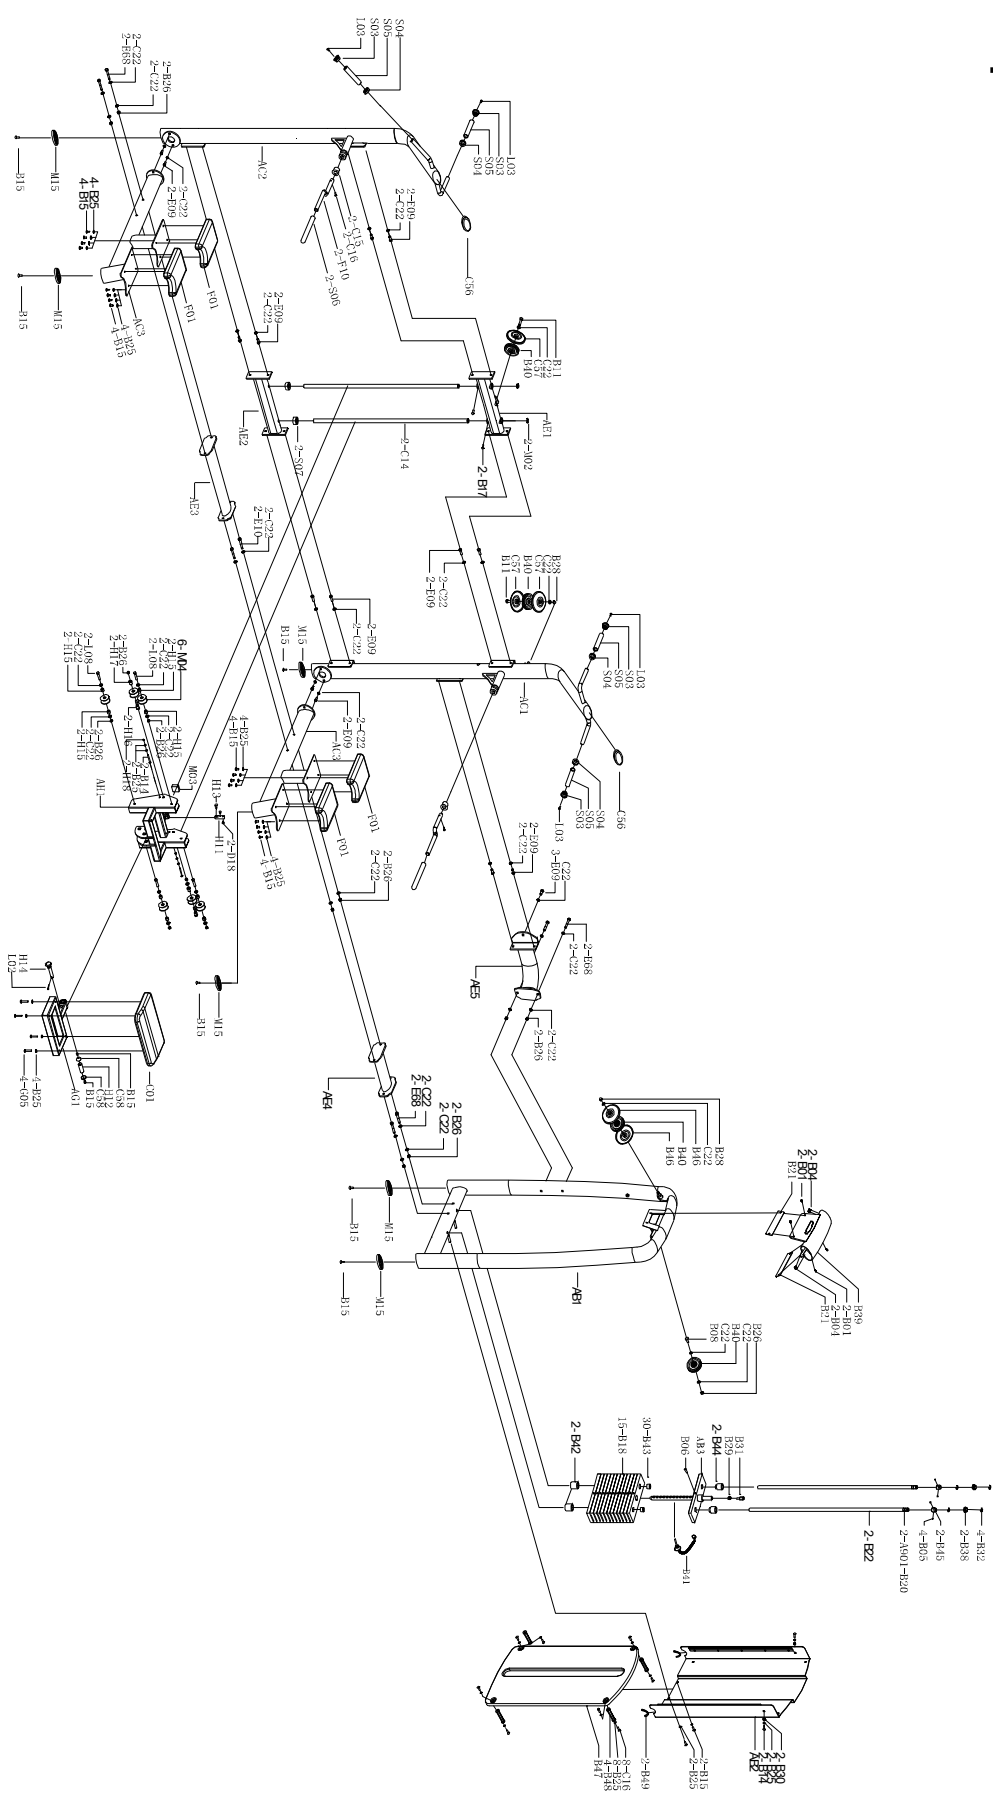


Assmble Step :

Use tool :



- 1. M5 Hex spanner**
- 2. M6 Hex spanner**
- 3. Two 13-16 spanner**
- 4. Two 17-19 spanner**
- 5. One 17-19 spanner**

Step 1

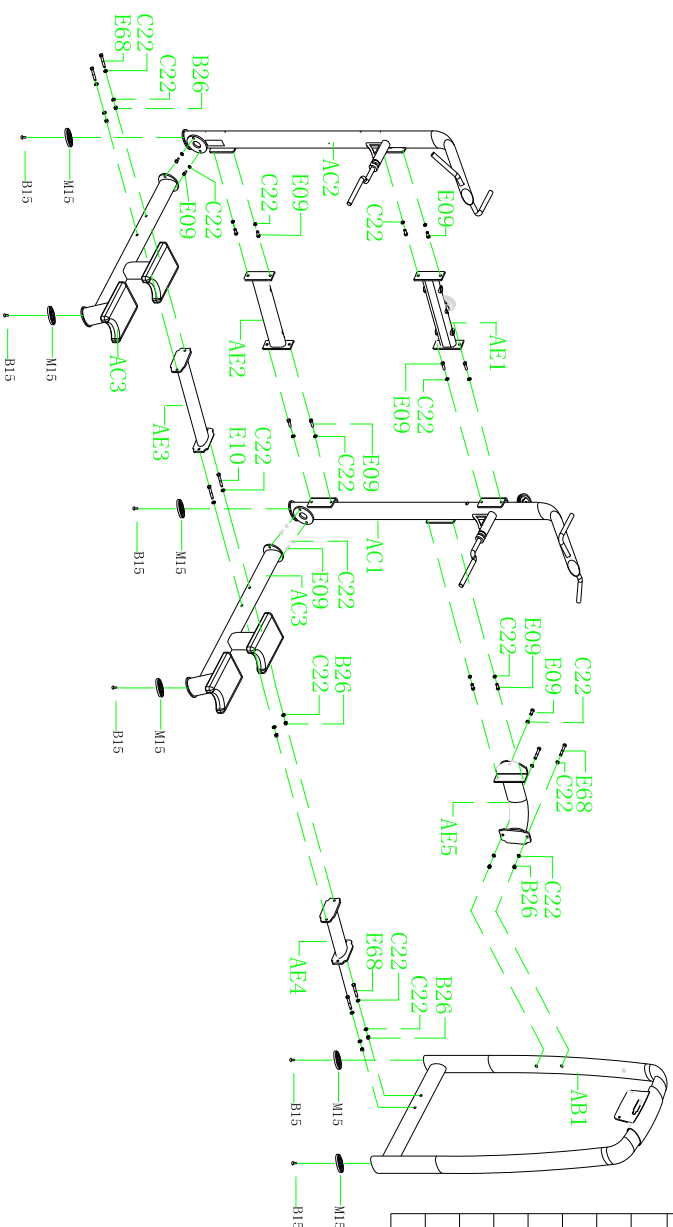


No.	name	size	quantity
AB1	wicket weld group		1
AC1	Right Main Frame Welding Assembly		1
AC2	Left Main Frame Welding Assembly		1
AC3	Foot Pedal Support Tube		1
AE1	Upper Main Frame Connecting Support		1
AE2	Under Main Frame Connecting Support I		1
AE3	Under Main Frame Connecting Support II		1
AE4	lower connecting support weld group		1
AE5	Upper Connecting Support Welding Assembly		1
B26	lock nut	M2	8
C22	gasket	M2	33
E09	outer hexagon screw	M2*25L	17
E10	outer hexagon screw	M2*90L	2
E68	outer hexagon screw	M2*85L	4
M5	feet pad		6
B15	semi circle head inner hexagon screw	M8*15L	6

Step 2

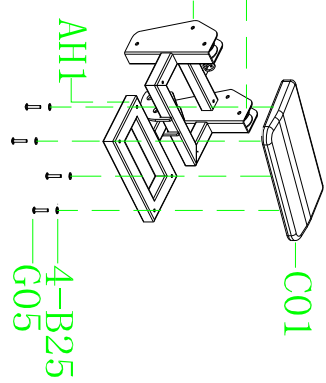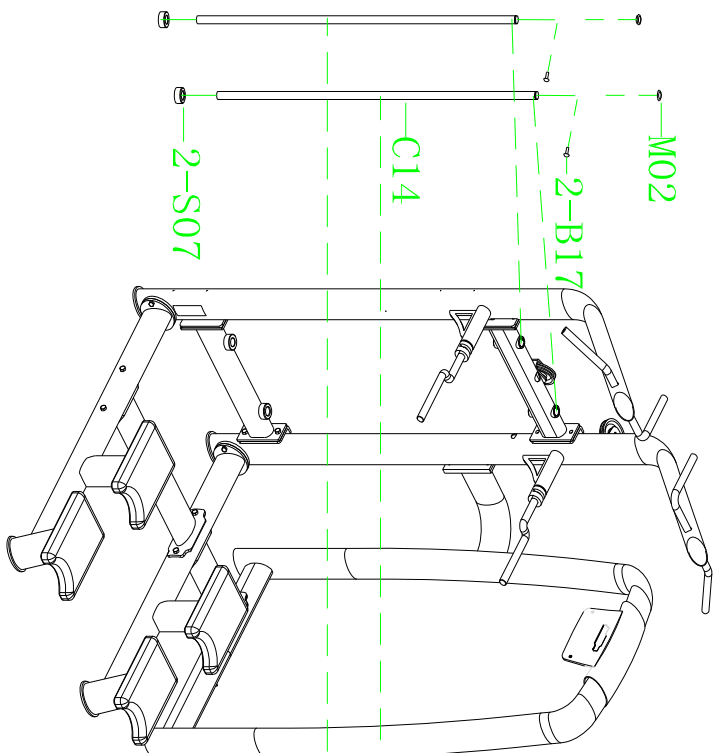


No.	name	size	quantity
C01	back cushion		1
C14	Side Lever	∅ 25*1280L	2
M02	Round Inner Ring	∅ 25	2
B17	semi-circular head inner hexagon screw	M8*10L	2
B25	gasket	M8	4
G05	semi-circular head inner hexagon screw	M8*75L	4
AH1	Wheel barrow Wheel Assembly		1
S07	Thin Crash Roll	60*25	2

Step 3

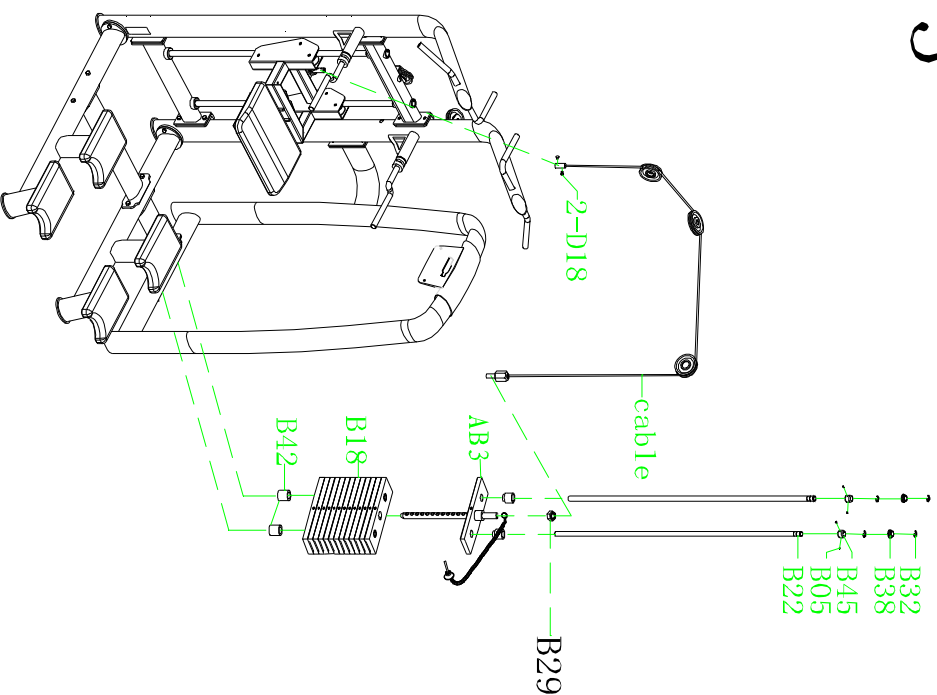

No.	name	size	quantity
AB3	first weight stack weighting group		1
D18	semi circle head inner hexagon screw	M8*20L	2
B05	jackling screws	M6*6L	4
B18	weight stack	280L*90W*24	15
B22	Guide bar	φ 20*1310	2
B32	multifunction fix spring		4
B38	inside plug for guide stem	20*25	2
B42	crash washer	50*60	2
B45	guide stems sliding sleeve		2
	cable		1
B29	nut	M6	1

Step 4

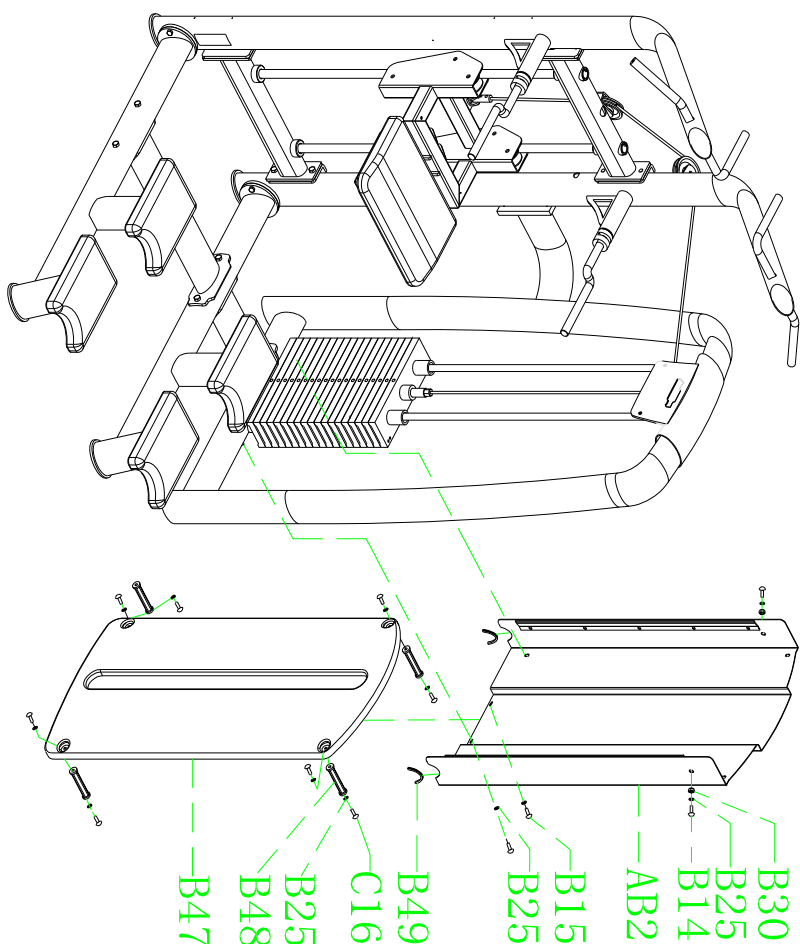

Nb.	name	size	quantity
AB2	Cover plate wedge group		1
C16	semi circular head inner hexagon screw	M8 25L	4
B14	semi circular head inner hexagon screw	M8 55L	2
B15	semi circular head inner hexagon screw	M8 15L	2
B25	gasket	M8	12
B30	nut	M8	2
B17	front wedge stack cover		1
B48	A9-030		4
B49	Vertical cushion		2